

705-QT62M0-03

Godox

高速影室闪光灯

Amazing Fast Speed and Multi-Freeze Flash

QT400IIM / QT600IIM

QT II Series



合格证
QC PASS

深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋
电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District,
Shenzhen 518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423
E-mail: godox@godox.com

godox.com

Made in China



说明手册

INSTRUCTION MANUAL

规格参数

型号	QT600IIM	QT400IIM	
闪光模式	M/Multi/Hss (高速同步)		
1/1 档闪光指数(m ISO 100, 使用标准反光罩)	76	65	
闪光持续时间(t0.1)	高速闪光 (speed) 模式	1/316 秒 - 1/28984 秒(220V); 1/190 秒 - 1/19606 秒(110V);	1/416 秒 - 1/35086 秒(220V); 1/192 秒 - 1/22988 秒(110V);
	色温恒定模式	1/316 秒 - 1/4246 秒(220V); 1/190 秒 - 1/3766 秒(110V);	1/416 秒 - 1/4938 秒(220V); 1/192 秒 - 1/3702 秒(110V);
	色温恒定模式	5600±200K	5600±200K
色温	高速闪光 (speed) 模式	5400K~9500K	5400K~9500K
	高速同步闪光模式	4600K~5000K	4600K~5000K
	功率 POWER	600WS	400WS
回电时间	约 0.05-0.9 秒		
档位范围	M	1/128~1/1	
	Hss	1/16~1/1	
	Multi	1/128~1/8	
频闪闪光	具备(最大次数:99 次;最大频率:30)		
实现同步方式	高速同步(最高 1/8000 秒),前帘同步,后帘同步		
延时引闪	0.01~30 秒		
蒙板(MASK)	√		
风扇	√		
蜂鸣器	√		
Model 造型灯	150W		
光控引闪	S1/S2		
显示闪光持续时间	√		
显示	高品质 LCD 液晶屏		
• 无线电 2.4G 传输(X 系统)			
无线功能	从属单元, ON/OFF		
可控制从属单元组	16 组:0~9,A,B,C,D,E,F		
传输范围(约)	50m		
频道	32 组:1~32		
同步触发方式	6.35mm同步插孔, 无线控制插座, 内置2.4G无线传输		
尺寸	灯体直径:Φ14CM, 含把手高:23CM, 含保护罩长:41CM		
净重	约 2.96KG		

维护保养

- 闪光灯在工作时,如发现异常,应立即关掉电源,查明原因。
- 灯体应避免震动,平时注意表面除尘。
- 灯体稍有发热为正常现象,无特别需要时,勿连续引闪。
- 闪光灯的所有维修概由本厂指定可供原厂配件之维修部负责。
- 1年保修,消耗品如灯管等,不在1年保修范围。
- 经发现,擅自检修此闪光灯的,将取消闪光灯之一年保修期,维修需要收取相关费用。
- 如果本品出现故障或者被水淋湿,在专业人员维修后方可继续使用。
- 如有技术更改,恕不另行通知。

Foreword

Thank you for purchasing a GODOX product.

Thanks for choosing QTII series high-speed flash. It has wide-range applicability, not only perfect for all kinds of studio and workshop photography, but also good at capturing fast-changing actions in a chain of pictures in high-speed continuous shooting e.g. action photography, stage photography, sports photography, scientific photography, etc. In addition, in fashion or portrait photography, photographers can capture a series of fast-changing facial expressions and amazing moves, and clearly freeze each fleetingly perfect instant into eternal beauty. Among the benefits you'll enjoy:

- Ultra-speedy charging, 0.05-0.9s recycling time
- Multi-freeze shots, flash duration(t0.1) in high-speed (speed) mode can up to:
220V 600W: 1/ 28984S
220V 400W: 1/ 35086S
110V 600W: 1/ 19606S
110V 400W: 1/ 22988S
- Achieving 1/8000s high-speed sync (with high-speed trigger e.g. X1)
- Up to 10 shots in one second under high-speed continuous shooting
- Exact output control on LED display from 1/128 to 1/1
- High qualified modeling lamp, 150W output adjustable for 20 steps
- Outstanding output stability, less than 2% shifts when under the same output
- High color stability, ranging within ±200k (stable mode) between flashes over the entire power range
- Built-in X1 system (2.4G transmission)
- S1/S2 Optical slave triggering
- Delay function
- Mask function
- High qualified LCD panel

Warning

To prevent damage to the product or injury to you or to others, read the following warnings in their entirety before using this product. Keep these Warning where users can read them for ready reference.

- ▲ Do not disassemble or modify. Should the product break down, send the defective back to the authorized service center for inspection and maintenance.
- ▲ Keep dry. Do not handle with wet hands, immerse in water, or expose to rain.
- ▲ Keep out of reach of children.
- ▲ Please put the device in a ventilation environment and keep the parts of lighting and heat dissipation holes are unobstructed. Do not use in flammable environment.
- ▲ As this product adopts make and break device, please keep it easy to be used.
- ▲ No touching the heating parts of this product.
- ▲ Please turn off the power and wear insulated gloves before installing and connecting accessories. When replacing the tube or modeling lamp, please make sure that the tube is cool and wear insulated gloves to prevent burns.
- ▲ Do not flash directly towards naked eyes (especially those of babies), otherwise it may lead to visual impairment.
- ▲ Disconnect from the power supply when it will not be used for an extended period.

Caution

- ▲ After 30 continuous flashes at full power, the flash should be cooled down for about 3 minutes. Overheating will occur if it is used continuously without cooling down.
- ▲ Do not keep using the modeling lamp for a long time; otherwise flammable accessories attaching to flash head, e.g. softbox will get burnt. A 10-minute time is recommended in this case. After 10 minutes, cool it down for 1 minute.
- ▲ When using a snoot, do not keep the modeling lamp on for a long time or fire too frequently (not over six times for one minute). Overheating will result in damages for strobe housing and/or studio light.
- ▲ Avoid sudden impacts as this can damage the flash tube and/or modeling lamp.

Conventions used in this Manual

- This manual is based on the assumption that both the camera and camera flash's power switches are powered on.
- Reference page numbers are indicated by "p.**".
- The following alert symbols are used in this manual:
 - ▲ The Caution symbol indicates a warning to prevent shooting problem.
 - The Note symbol gives supplemental information.

Contents

16	Foreword
17	Warning
17	Caution
20	Names of Parts
	Body
	LCD Panel
	Accessories
	Separately Sold Accessories
22	Operations
	Flash Preparation
22	M: Manual Flash
	Stable Color Temperature Mode and High-Speed Flash (speed) Mode
24	⚡ High-Speed Sync
25	Multi: Stroboscopic Flash
26	Wireless Flash Shooting: Radio (2.4G) Transmission
	Wireless Settings
	Setting the Communication Channel
	Setting the Communication Group
27	Slave Trigger Model
27	Modeling Lamp
28	Buzz Function
28	C.Fn: Setting Custom Function
29	Other Applications
	Wireless Control Function
	Sync Triggering
	Memory Function
	Tube Replacement
30	Technical Data
30	Maintenance


Name of Parts

Body:



Name of Parts

LCD Panel:

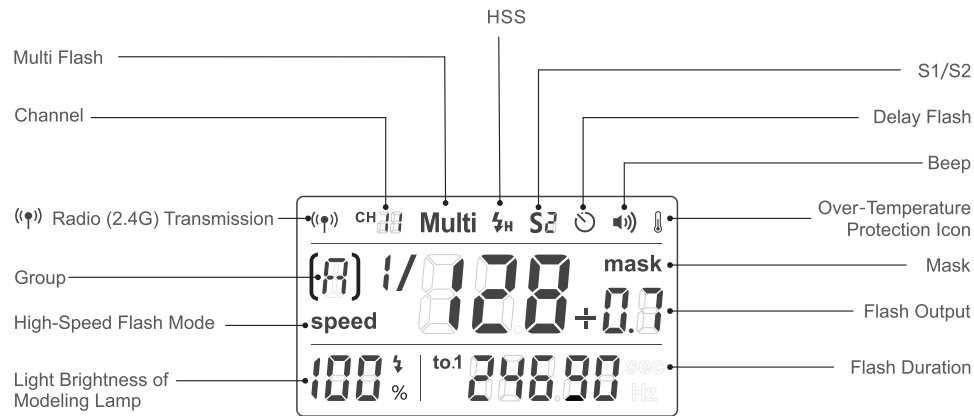

Accessories

1. Sync Cord
2. Power Cord
3. Standard Reflector
4. Lamp Cover
5. Glass Protection Cover
6. Modeling Lamp
7. Instruction Manual



Separately Sold Accessories

The product can be used in combination with the following accessories sold separately, so as to achieve best photography effects:
X1 TTL Flash Trigger, Power Inverter, Softbox, Photographic Umbrella, Light Stand, Barndoor, Snoot, etc.



Operations

Flash Preparation

1. Take down the lamp cover. Install the modeling lamp and put on the glass protection cover and the standard reflector. (To uninstall the standard reflector, press the orange release button on the flash head and turn the standard reflector counter-clockwise to take it out, as illustrated in the picture.)



2. Attach the flash unit on an appropriate light stand. Adjust the mounting bracket for a good angle and make sure it's tightened and fixed. Use the direction adjusting handle to adjust the flash on a desired direction. Umbrella input is for different photo umbrellas to put in.

M: Manual Flash

The flash output is adjustable from 1/1 full power to 1/128th power in 0.1 stop increments. To obtain a correct flash exposure, use a hand-held flash meter to determine the required flash output.




1 Press <MODE> button so that <M> is displayed.

2 Turn the Select Dial to choose a desired flash output amount.

Display Flash Duration

Flash duration refers to the length of time that from flash's firing to reach the half peak at maximum. The half peak at maximum is usually expressed as $t=0.5$. In order to provide the photographer with more concrete data, this product adopts $t=0.1$. The difference between $t=0.5$ and $t=0.1$ is shown in the following picture.

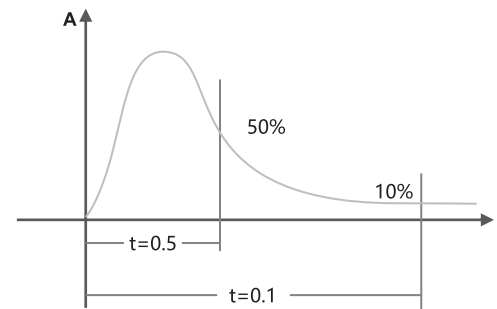

• Flash duration will only be displayed in the M mode.

Stable Color Temperature Mode and High-Speed Flash (speed) Mode

Stable Color Temperature Mode or High-Speed Flash (speed) Mode can be chosen in the C.Fn-F1 setting. These two modes are effective in M/Multi mode and ineffective in high-speed sync mode.

Stable Color Temperature Mode: color temperature ranges within $\pm 200\text{K}$, which is a good choice for the photographers who pursues stable color temperature.

High-Speed Flash (speed) Mode: the max flash duration is up to $t0.1=1/28984$, which is perfect for capturing the fast-changing actions. As the color temperature is a little higher in this mode, please set the camera's white balance parameter to the proportional color temperature amount (see the chart below) or AWB (Auto White Balance).

220V QT600IIM Prototype Test

Test Environment	Darkroom	
Color Temperature Test	Equipment	SEKONIC C-700
	Testing Method	Trigger beyond 2 meters and average the amount of 3 tests.
Flash Duration (t0.1)	IGBT control the time of turning on the flash	
Stable Color Temperature Mode		
Parameter Level	Color Temperature CCT(K)	Flash Duration t0.1(S)
1/128	5729	1/ 4246
1/128+0.3	5718	1/ 4166
1/128+0.7	5686	1/ 3920
1/64	5619	1/ 3920
1/64+0.3	5635	1/ 3920
1/64+0.7	5657	1/ 3920
1/32	5630	1/ 3920
1/32+0.3	5639	1/ 3920
1/32+0.7	5608	1/ 3702
1/16	5620	1/ 3702
1/16+0.3	5647	1/ 3702
1/16+0.7	5657	1/ 3702
1/8	5677	1/ 3702
1/8+0.3	5674	1/ 3508
1/8+0.7	5610	1/ 2666
1/4	5568	1/ 2298
1/4+0.3	5566	1/ 1904
1/4+0.7	5656	1/ 1626
1/2	5646	1/ 1332
1/2+0.3	5681	1/ 1256
1/2+0.7	5649	1/ 832
1/1	5549	1/ 316

High-Speed Flash (speed) Mode		
Parameter Level	Color Temperature CCT(K)	Flash Duration t0.1(S)
1/128	9335	1/ 28984
1/128+0.3	9108	1/ 26666
1/128+0.7	9010	1/ 24690
1/64	8535	1/ 22988
1/64+0.3	8205	1/ 20832
1/64+0.7	7698	1/ 18518
1/32	7367	1/ 16666
1/32+0.3	7151	1/ 15150
1/32+0.7	6856	1/ 13332
1/16	6579	1/ 11904
1/16+0.3	6440	1/ 10582
1/16+0.7	6216	1/ 8888
1/8	6126	1/ 7662
1/8+0.3	6072	1/ 6666
1/8+0.7	5954	1/ 5332
1/4	5907	1/ 4596
1/4+0.3	5867	1/ 3808
1/4+0.7	5837	1/ 2898
1/2	5844	1/ 2222
1/2+0.3	5738	1/ 1550
1/2+0.7	5636	1/ 832
1/1	5539	1/ 316

220V QT400IIM Prototype Test

Test Environment	Darkroom	
Color Temperature Test	Equipment	SEKONIC C-700
	Testing Method	Trigger beyond 2 meters and average the amount of 3 tests.
Flash Duration (t0.1)	IGBT control the time of turning on the flash	
Stable Color Temperature Mode		
Parameter Level	Color Temperature CCT(K)	Flash Duration t0.1(S)
1/128	5744	1/ 4938
1/128+0.3	5759	1/ 4694
1/128+0.7	5747	1/ 4444
1/64	5761	1/ 4444
1/64+0.3	5775	1/ 4444
1/64+0.7	5780	1/ 4444
1/32	5753	1/ 4444
1/32+0.3	5771	1/ 4444
1/32+0.7	5754	1/ 4444
1/16	5764	1/ 4444
1/16+0.3	5752	1/ 4444
1/16+0.7	5755	1/ 4444
1/8	5777	1/ 4444
1/8+0.3	5734	1/ 3920
1/8+0.7	5665	1/ 3030
1/4	5604	1/ 2468
1/4+0.3	5621	1/ 2468
1/4+0.7	5626	1/ 2222
1/2	5654	1/ 2082
1/2+0.3	5672	1/ 1514
1/2+0.7	5695	1/ 1148
1/1	5595	1/ 416


High-Speed Flash (speed) Mode		
Parameter Level	Color Temperature CCT(K)	Flash Duration t0.1(S)
1/128	9323	1/ 35086
1/128+0.3	9277	1/ 33332
1/128+0.7	9130	1/ 30302
1/64	8919	1/ 27776
1/64+0.3	8926	1/ 25640
1/64+0.7	8836	1/ 22222
1/32	8432	1/ 20202
1/32+0.3	8183	1/ 18518
1/32+0.7	7784	1/ 16666
1/16	7368	1/ 15150
1/16+0.3	6983	1/ 13332
1/16+0.7	6763	1/ 11494
1/8	6533	1/ 10100
1/8+0.3	6377	1/ 8546
1/8+0.7	6192	1/ 6872
1/4	6061	1/ 5648
1/4+0.3	5957	1/ 4566
1/4+0.7	5840	1/ 3508
1/2	5962	1/ 2656
1/2+0.3	5807	1/ 2014
1/2+0.7	5711	1/ 1148
1/1	5579	1/ 416

High-Speed Sync

In this mode, you can set the flash output from 1/1 full power to 1/16th power in 0.3 stop increments. High Speed Sync enables the flash to synchronize with all camera shutter speeds. This is convenient when you want to use aperture priority for fill-flash portraits.



1 Press the <MODE> Button so that <H> is displayed.

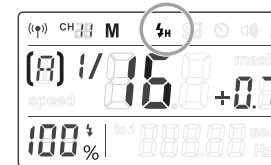

2 Turn the Select Dial to set the flash output power.




3 Please use the transmitter of X1 series.


- With high-speed sync, the faster the shutter speed, the shorter the effective flash range.
- Multi flash mode cannot be set in high-speed sync mode.
- With high-speed sync, the color temperature is lower (decrease around 700K) because of tube's characteristics. Please set the camera to AWB (Auto White Balance).

Multi: Stroboscopic Flash


In this mode, you can set the flash output from 1/128th power to 1/8th power in 0.3 stop increments. With stroboscopic flash, a rapid series of flashes is fired. It can be used to capture a multiple images of a moving subject in a single photograph. You can set the firing frequency (number of flashes per sec. expressed as Hz), the number of flashes, and the flash output.

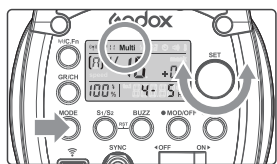

1 Press <MODE> button so that <Multi> is displayed.

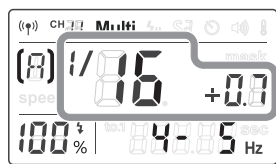

2 Turn the Select Dial to choose a desired flash output.

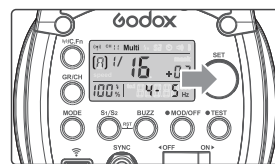

3 Set the flash frequency and flash times.

- Press <SET> Button to select the flash times. Turn the Select Dial to set the number.
- Press <SET> Button to select the flash frequency. Turn the Select Dial to set the number.

Calculating the Shutter Speed

During stroboscopic flash, the shutter remains open until the firing stops. Use the formula below to calculate the shutter speed and set it with the camera.

$$\text{Number of Flashes} / \text{Flash Frequency} = \text{Shutter Speed}$$

For example, if the number of flashes is 10 and the firing frequency is 5 Hz, the shutter speed should be at least 2 seconds.

- Stroboscopic flash is most effective with a highly reflective subject against a dark background.
- Using a tripod and a remote control is recommended.
- A flash output of 1/1 and 1/2 cannot be set for stroboscopic flash.
- If the number of flashes is displayed as "—", the firing will continue until the shutter closes or the battery is exhausted. The number of flashes will be limited as shown by the following table.

Maximum Stroboscopic Flashes:

Flash Output \ Hz	1	2	3	4	5	6-7	8-9	10	11	12-14	15-19	20-30
1/8	7	6	5	4	4	3	3	2	2	2	2	2
1/16(+0.3.+0.7)	14	14	12	10	8	6	5	4	4	4	4	4
1/32(+0.3.+0.7)	30	30	30	20	20	20	10	8	8	8	8	8
1/64(+0.3.+0.7)	60	60	60	50	50	40	30	20	20	20	18	16
1/128(+0.3.+0.7)	99	99	90	80	80	70	60	50	40	40	35	30

Wireless Flash Shooting: Radio (2.4G) Transmission


QTII adopts built-in 2.4G wireless X system, which is perfectly compatible with other products of our company. Nikon cameras (using X1T-N, TT685N, etc.) and Canon cameras (using X1T-C, TT685C, etc.) can enjoy one or more QTII together.



*As a slave unit, QTII can be controlled by the master unit e.g. AD360II-C, AD360II-N, TT685C, TT685N, X1T-C, X1T-N, TT600, etc.

Wireless Settings

Press <W/C.Fn> Wireless Button so that <W> is displayed, entering the 2.4G wireless status now.

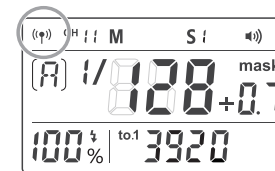


Setting the Communication Channel


If there are other wireless flash systems nearby, you can change the channel IDs to prevent signal interference. The channel IDs of the master unit and the slave unit(s) must be set to the same.



1 Long press the <GR/CH> Button for 2 seconds until the channel IDs is blinking.

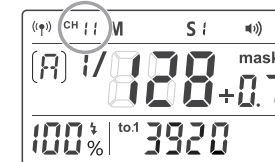


2 Turn the Select Dial to choose the channel from 1 to 32.

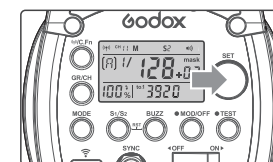


Setting the Communication Group



1 Short press the <GR/CH> Button for 2 seconds until the group IDs is blinking.

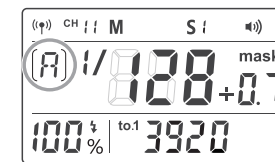



2 Turn the Select Dial to choose

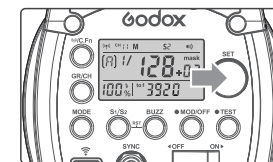

Slave Trigger Model



Optical S1 Secondary Unit Setting

In M manual flash mode, press <S1/S2> button so that this flash can function as an Optical S1 secondary flash with Optical sensor. With this function, the flash will fire synchronously when the main flash fires, the same effect as that by the use of radio triggers. This helps create multiple lighting effects.

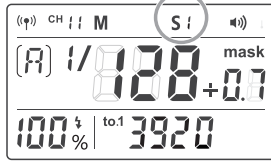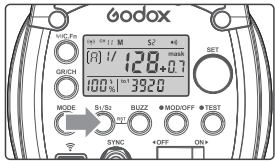

Optical S2 Secondary Unit Setting

Press <S1/S2> button so that this flash can also function as an Optical S2 secondary flash with Optical sensor in M manual flash mode. This is useful when cameras have pre-flash function. With this function, the flash will ignore a single "preflash" from the main flash and will only fire in response to the second, actual flash from the main unit.

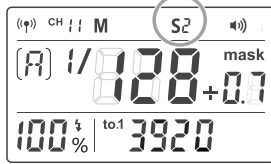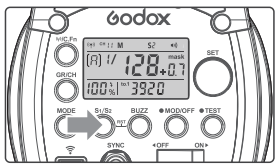

Modeling Lamp

QTII has a 150W modeling lamp which offers 5% to 100% light adjustment and 2 long lighting modes.

Modeling Lamp's ON/OFF and Settings:


- When the modeling lamp is OFF, short press the Modeling Lamp Button to turn it on;
- When the modeling lamp is ON, short press the Modeling Lamp Button to setting the light brightness. As the lighting amount is blinking, turn the Select Dial to choose.

• Turn off the Modeling Lamp

Long press the Modeling Lamp Button for 2 seconds to turn it off.

• Choose the Modeling Lamp's Modes


- Long press the C.Fn Custom Button for 2 seconds until Fn menu is displayed.
- Press the SET Button to choose F4.
- Turn the Select Dial to choose the Modes:
ON: the modeling lamp will keep this status when triggering;
OFF: the modeling lamp will turn off when triggering;

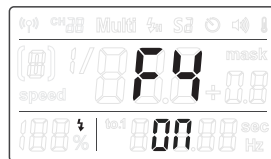


Buzz Function

The Buzz Button is used to decide whether there is sound reminder for ready flash after recharging. When the buzz indicator is displayed on the LCD panel, it means the sound reminder is turned on; if not displayed, the sound reminder is turned off.

- A "BI" sound will be heard when it's fully charged.
- A "BI" sound will be heard when the button and the select dial echo each other.

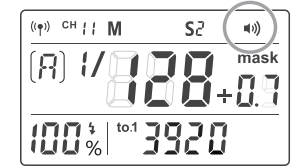


C.Fn Setting Custom Function

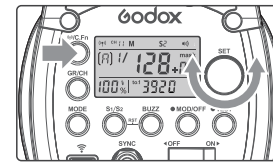

- Long press the C.Fn Custom Button for 2 seconds until <Fn> menu is displayed.



- Press the <SET> Button to choose Fn function signs.

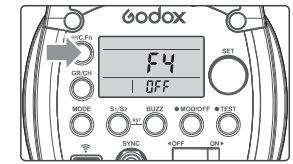

- Turn the Select Dial to change the settings. Short press the C.Fn Custom Button to exit.


Custom Function Signs	Function	Setting No.	Settings & Description	Restrictions
F1	Choose high-speed flash	ON	High-Speed Flash (speed) Mode	M/Multi mode
		OFF	Stable Color Temperature	
F2	Delay flash	OFF, 0.01~30S	Trigger as second curtain	M/Multi mode
F3	Mask function	OFF	Mask function is off	M mode
		N1	Mask function is on: when setting 2 times' triggering as a period, the first triggering will fire a flash.	
		N2	Mask function is on: when setting 2 times' triggering as a period, the second triggering will fire a flash.	
F4	Modeling lamp mode	ON	The modeling lamp will not change its status when triggering.	No
		OFF	The modeling lamp will turn off when triggering.	

Other Applications

Wireless Control Function

The flash unit is built in with a Wireless Control Port so that you can wirelessly adjust the power level of the flash and the flash triggering.


To control the flash wirelessly, you need a FT-16 remote control set (on-camera and on-flash). Insert its receive end into the Wireless Control Port on the flash and insert the transmit end into the camera hot shoe. Settings made on the hotshoe-mounted transmit and receive ends will be wirelessly communicated to the flash. Then you can press the camera shutter release button to trigger the flash. You can also hold the transmit end at hand to control your off-camera flash.

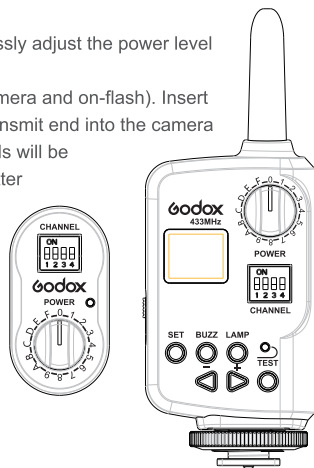

For full instructions on the use of FT series remote control, see its user manual.

Sync Triggering

The Sync Cord Jack is a $\Phi 6.35\text{mm}$ plug. Insert a trigger plug here and the flash will be fired synchronously with the camera shutter.

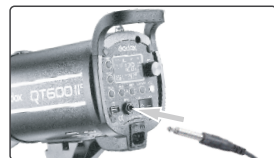

Memory Function

The device is equipped with memory function for the panel setting. It will help remember the panel setting 3 second after you set it. When starting up the flash next time, the panel setting will be the same as the status before powering it off.

Tube Replacement

Shut down the power and remove the power cord before replacing the flash tube and wear insulated gloves. Then, loosen the iron wire on the tube, keep a balanced hold on the two feet of the flash tube and pull out the old tube gently. Take down the feet casing from the old tube and put it on the new one. Hold two feet of the new tube, and target directly towards the two copper outlets, then push them slightly in. Twine the iron wire on the stainless steel sheet to fix the flash tube.



Technical Data

Model	QT600IIM	QT400IIM	
Flash Mode	M/Multi/Hss(high-speed sync)		
Guide Number in 1/1 full power (m ISO 100, using standard reflector)	76	65	
Flash Duration (t0.1)	High-Speed Flash (speed) Mode	1/316s - 1/28984s (220V)	1/416s - 1/35086s (220V)
		1/190s - 1/19606s (110V)	1/192s - 1/22988s (110V)
	Stable Color Temperature Mode	1/316s - 1/4246s (220V)	1/416s - 1/4938s (220V)
	1/190s - 1/3766s (110V)	1/192s - 1/3702s (110V)	
Color Temperature	Stable Color Temperature Mode	5600±200K	5600±200K
	High-Speed Flash (speed) Mode	5400K-9500K	5400K-9500K
	High-Speed Sync Flash (speed) Mode	4600K-5000K	4600K-5000K
POWER	600WS	400WS	
Recycle Time	Approx. 0.05-0.9s	Approx. 0.05-0.7s	
Output Level	M	1/128~1/1	
	Hss	1/16~1/1	
	Multi	1/128~1/8	
Multi Flash	Yes (max. flash time:99; max. flash frequency: 30)		
Sync Mode	High-speed sync (up to 1/8000s), first curtain sync, second curtain sync		
Delay Flash	0.01~30s		
MASK Function	✓		
Fan	✓		
Beeper	✓		
Modeling lamp	150W		
Slave Trigger Model	S1/S2		
Display Flash Duration	✓		
Display	High qualified LCD panel		
• Radio (2.4G) Transmission (X system)			
Wireless Function	Slave unit, ON/OFF		
Controllable Slave Units	16 groups: 0~9, A,B,C,D,E,F		
Transmission Range (approx.)	50m		
Channel	32: 1~32		
Sync Triggering Mode	6.35mm sync cord jack, wireless control port, built-in 2.4G wireless transmission		
Dimension	Flash diameter $\Phi 14\text{CM}$, height of flash with handle 23CM, length of flash with lamp cover 41CM		
Net Weight	Approx. 2.96Kg		

Maintenance

- Shut down the device immediately when it works abnormally and find out the reason.
- Avoid sudden impacts and the lamp should be dedusted usually.
- It's normal for lamp being warm when in use. Avoid continuous flashes when it is not necessary.
- Maintenance of all the flashes is up to our authorized maintenance department which can provide original accessories. Users can replace the flash tube and modeling lamp provided by the manufacturer.
- One year warranty period will be cancelled when any unauthorized maintenance is found.
- If the product had failures or was wetted, it can be continuously used only after it is repaired by professionals.
- Disconnect the power when doing maintenance work or cleaning.
- New changes made to the specifications or designs may not be updated in this manual.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning
Operating frequency:2412.99MHz – 2464.49MHz (only receive)

Declaration of Conformity
GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.For more information of DoC, Please click this web link:

https://www.godox.com/DOC/Godox_QTII_Series_DOC.pdf

The device complies with RF specifications when the device used at 0mm from your body.

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safekeep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note:		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the **Product Maintenance Information** (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. **The product or accessory has expired its warranty period;** ②. **Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;** ③. **Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;** ④. **The original identifying information of product or accessory is modified, alternated, or removed;** ⑤. **No valid warranty card;** ⑥. **Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;** ⑦. **Breakage or damage caused by force majeure or accident;** ⑧. **Breakage or damage that could not be attributed to the product itself.** Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following **Product Maintenance Information**:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g. battery charger, power cord, sync cable, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	No	Without warranty

Godox After-sale Service Call **0755-29609320-8062**